




ANCHORAGE POINT WITH SHOCK ABSORBER FORTRAPEZOIDAL METAL SHEET - AT 198

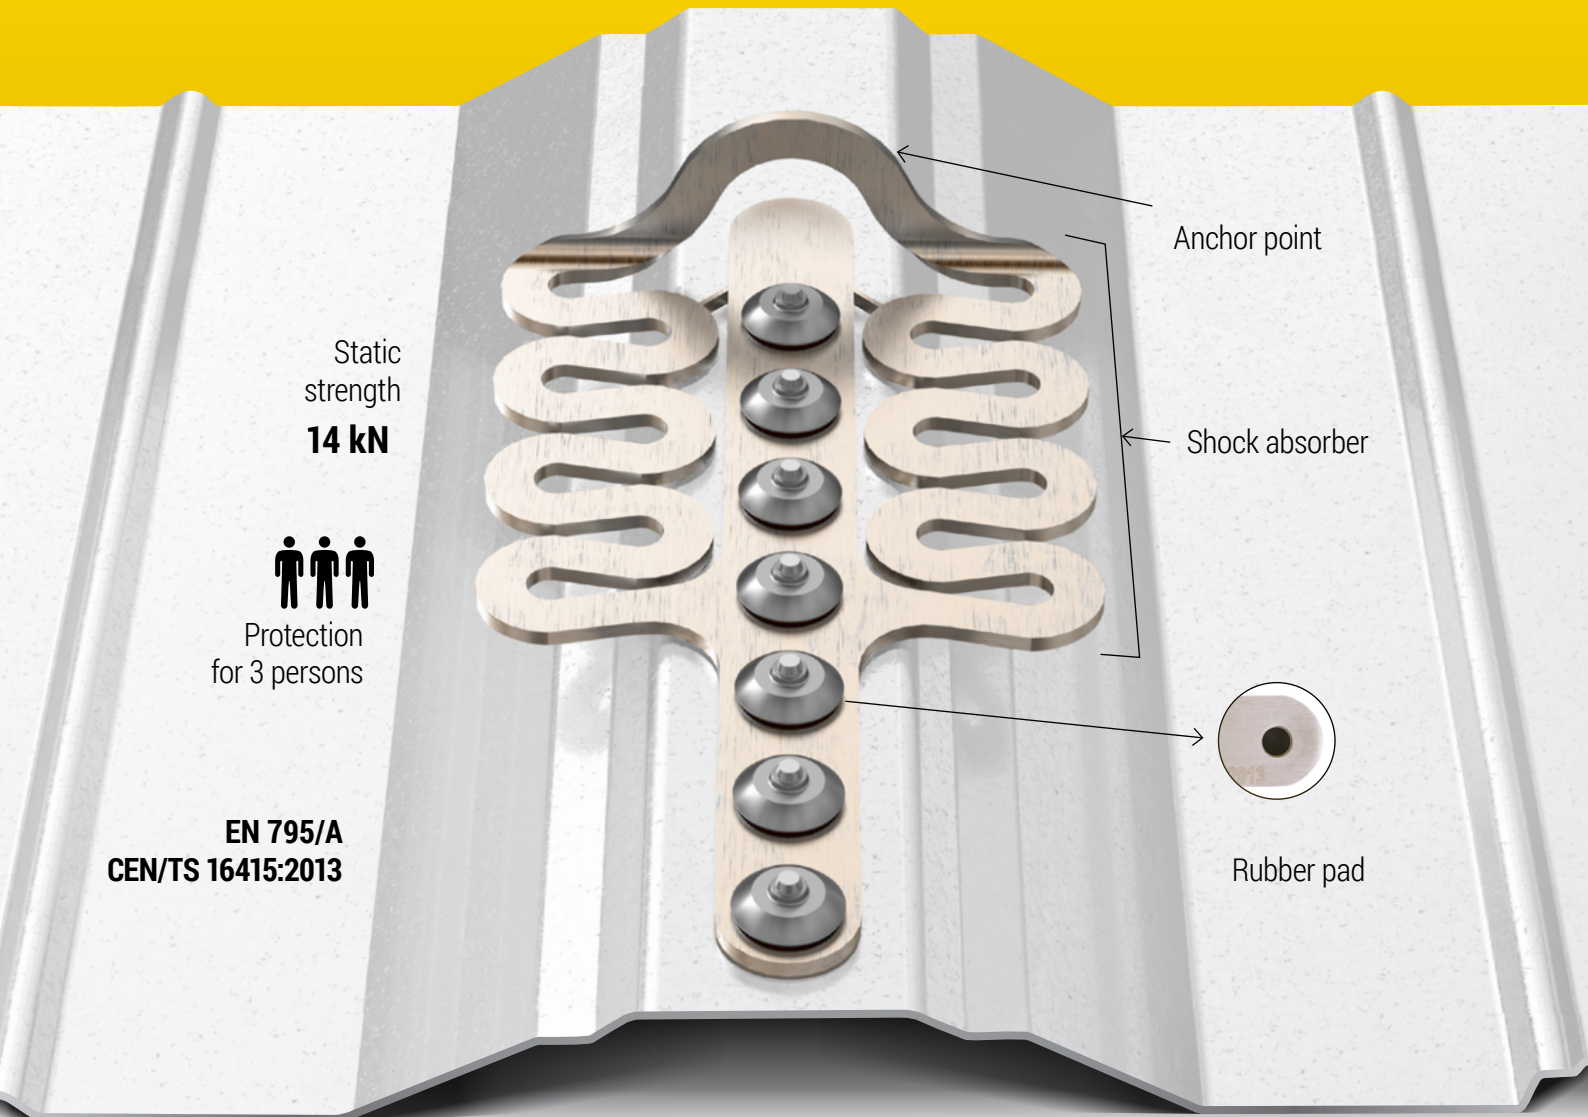

- ✓ SHOCK ABSORBER PROTECT THE ROOF STRUCTURE IN THE CASE OF FALL ARREST
- !!! SHOCK ABSORBER IS NOT A COMPONENT OF PERSONAL EQUIPMENT!

AT 198 001 INSTALLATION KIT:

- AT 198 stainless steel point
- and 7 rivets for trapezoidal sheet

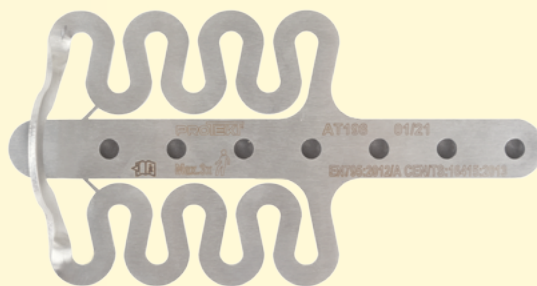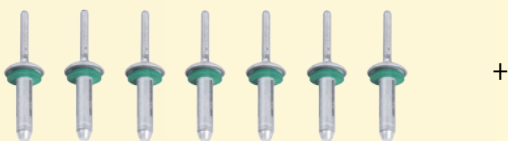


**Made
in Poland**


MOUNTING TO METAL SHEET

TRAPEZOIDAL SHEET


- over **0.5 mm** for steel sheet
- over **0.7 mm** for aluminum sheet

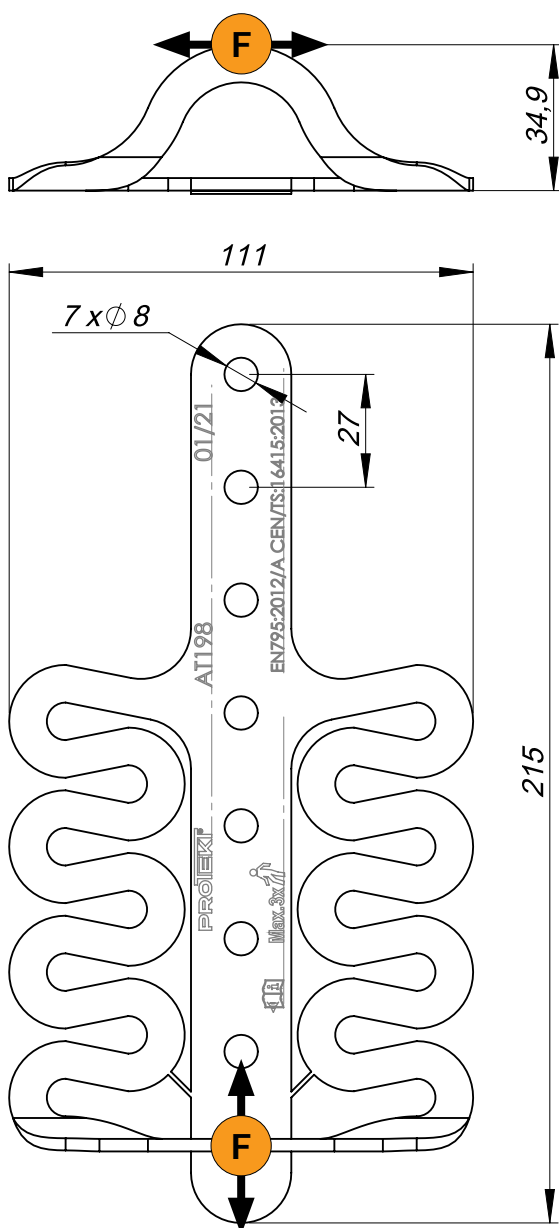

1. Place the point on the trapezoidal sheet in the upper „wave” of the sheet and using a drilling machine make 7 holes $\varnothing 8$ mm by drilling through the mounting holes AT198

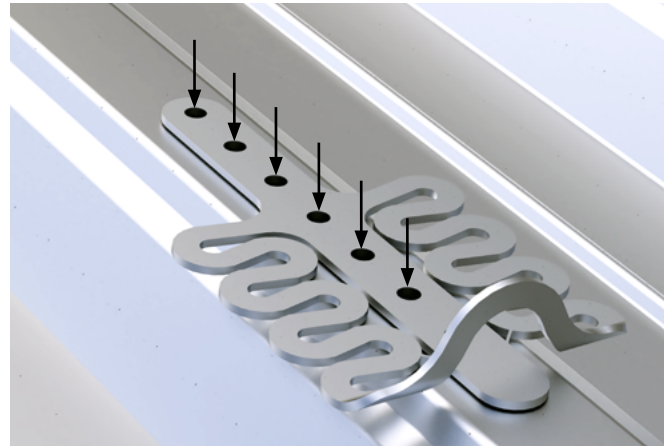

2. Then insert 7 rivets through the mounting holes at the anchor point

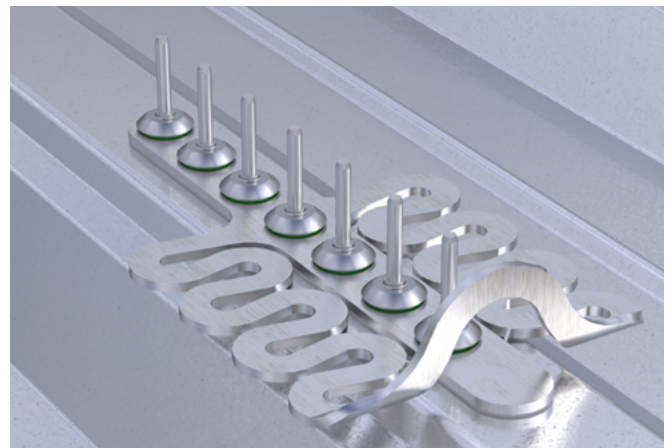

3. Rivet the rivets using a riveting tool

